



United States  
Environmental Protection  
Agency

Air and Radiation  
(6202J)

EPA-430-B-98-004E  
June 1998



## ENERGY STAR BUILDINGS<sup>SM</sup> MANUAL

# Stage Five Heating And Cooling System Upgrades



## Heating And Cooling System Upgrades Overview

The heat flow diagram (see Figure 1) illustrates how, in Stage Five—Heating And Cooling System Upgrades, you can capitalize on the heating, cooling, and electrical load reductions you have realized through your upgrades in Stages One through Four of the ENERGY STAR Buildings<sup>SM</sup> Five-Stage Approach. The cumulative effect of these various load reductions now allows you to install heating and cooling systems that are both more energy efficient and properly sized to accommodate smaller loads.

---

### Stage Five Strategy

- Measure your heating and cooling loads
  - Rightsize your heating and cooling systems
  - Replace your chillers with new, more energy-efficient, non-chlorofluorocarbon (CFC) models
  - Upgrade your heating and cooling system components
  - Install variable-speed drives (VSDs) on your pumps and cooling tower fans
  - Optimize operation of your heating and cooling systems
- 

*See Figure 1: Heat Flow In Buildings*

### The Best Ways To Save

- Cooling System Upgrades
  - High-Efficiency Components
  - Cooling Tower Improvements
  - Free Cooling
  - VSD Pumping
  - Controls
- Heating System Upgrades
  - High-Efficiency Components
  - Controls

Table 1. Potential Cooling And Heating Energy Savings

<i>System</i>	<i>Typical Savings</i>
Cooling	
Central Chiller	15-35%
Unitary A/C	20-35%
Heating	
Boiler	10-30%
Furnace	5-25%

**Adapted from:** E SOURCE, *Space Cooling Technology Atlas* and E SOURCE, *Space Heating Technology Atlas*.

## ***Use A Whole-System Approach***

The conventional approach to upgrading a heating and cooling system is to address each component of the system individually. However, addressing the interaction between the components using a **whole-system approach** ultimately results in a much more energy-efficient system. In addition, compared with assessing components individually, assessing upgrade opportunities for whole systems consumes less time, and therefore less money, in the long run.

Heating and cooling system components, particularly in central systems, interact with each other extensively. For example, chillers operate more efficiently if they receive cooler condenser water. However, the cooling tower fans consume more energy to provide cooler condenser water. Optimizing the energy use of the cooling tower/chiller system is one example of using a whole-system approach that can improve your building's performance and save you money.

## ***Heating And Cooling System Energy Use***

In large Federal facilities, the equipment used to produce chilled water for HVAC systems can account for up to 35 percent of a facility's electrical energy use. Heating systems may also use electricity, but the majority use natural gas or oil as the primary fuel.

Heating and cooling systems condition the air within a building so that occupants are comfortable and equipment operates properly. Heating and cooling systems consist mainly of chillers, boilers, cooling towers, and pumps. Cooling systems generally have higher space-conditioning capacities and may contain more extensive equipment than heating systems. This is because a large portion of the heating required for a building is supplied by waste heat from the people, lighting, and office equipment.

The proper design and operation of these systems can translate into significant savings. If you have followed the steps outlined in Stages One through Four, your cooling load may now be low enough to justify retrofitting or rightsizing your cooling system.

## ***Advantages Of A Rightsized System***

In addition to reducing energy consumption and costs, Stage Five upgrades will:

- Reduce noise
- Lower first costs for equipment
- Reduce equipment footprint
- Eliminate CFCs

## ***Take Action!***

1. Measure your existing heating and cooling loads. To begin, see the Heating And Cooling Survey (Appendix). Contact an engineering services firm for the more complex load measurement tasks
2. Total the reduction in cooling load achieved by your efforts in Stages One through Four. Calculate the proper size for your chiller. See the Heating And Cooling Survey (Appendix)
3. Using information from the Heating And Cooling Survey, investigate options for upgrading your chiller by running EPA's QuikChill software
4. Contact vendors and/or an engineering consultant who can recommend specific components and design upgrades for your heating and cooling system

## **Central Cooling Systems: Best Opportunities**

Your cooling systems are made up of various components that must all work together to operate at highest efficiency while ensuring proper occupant comfort. Improvements to any system must, of course, incorporate improvements to its individual pieces of equipment. However, these changes must be viewed as part of a whole-system approach. As you set out to improve your building's overall efficiency, keep in mind that modifications in the design or operation of one set of components will affect, positively or negatively, the operation of other equipment within the system.

There are four types of mechanical compression chillers—centrifugal, screw, scroll, and reciprocating. Different applications call for different chiller types. Generally, older chillers have efficiencies ranging from 0.8 to 1.0 kW/ton; they often consume approximately twice the energy of newer, more efficient chillers. Today, centrifugal chillers have efficiencies as low as 0.49 kW/ton. Table 2 shows the ranges in which these chiller technologies are available.

---

### Eliminating CFCs: Headache Or Opportunity?

- CFC refrigerant production was phased out by law on January 1, 1996. As existing stocks of CFCs dwindle and become more expensive, conversion to or replacement with non-CFC chillers is becoming more cost effective.
  - Existing, relatively new chillers may be cost effective to retrofit for non-CFC operation.
  - Replacing an older chiller with a new, non-CFC chiller is an excellent opportunity to invest in a high-efficiency unit. First cost for the installation will be reduced by installing a smaller chiller made possible by the implementation of Stages One through Four.
- 

## ***Chiller Retrofit***

If the existing chiller is relatively new (up to 10 years old), retrofitting the chiller to operate on non-CFC refrigerants at the newly reduced loads will probably be your most profitable option. This postpones investing in a new chiller. When you are replacing refrigerant, use HCFC-123 in place of R-11 and HFC-134a in place of R-12.

Retrofitting may involve replacing orifice plates, impellers, gaskets, or even the compressor. The specifics of the retrofit depend on the type of chiller and its manufacturer. Many manufacturers offer retrofit kits for their chillers. Contact the manufacturer of your chiller to determine its requirements.

Due to their inherent properties, non-CFC refrigerants are not as efficient and thus will affect the chiller efficiency by reducing its cooling tonnage at current or even increased levels of energy consumption. However, this loss will be offset by the reduced cooling loads obtained through implementing Stages One through Four of the Five-Stage Approach. Also, a capacity loss may not be a problem with converted units, since existing units may have been oversized when originally installed.

Table 2. Common Chiller Types And Efficiencies

<i>Chiller Type</i>	<i>Size Range (tons)</i>	<i>Full-load Efficiency (kW/ton)</i>
Centrifugal	100-1,500+	0.49-0.68
Screw	40-1,100	
water-cooled		0.61-0.70
air-cooled		1.1-1.3
Reciprocating	1-400	
water-cooled		0.8-1.0
air-cooled		1.4-1.6

Source: E SOURCE, *Space Cooling Technology Atlas*.

### CFCs Are On The Way Out

Eighty percent of today's existing chillers are centrifugal chillers that use R-11 as refrigerant. The newer, non-CFC alternative to R-11 is HCFC-123. Some centrifugal chillers use R-12; its non-CFC alternative is HFC-134a. Unitary A/C units typically use R-22, which will be phased out in the future.

<i>Phase-Out Dates</i>	<i>Refrigerants</i>	<i>Action</i>
1996	R-11, R-12, R-500, HCFC-152 A, CFC-114	Production of these refrigerants has stopped. Equipment using these refrigerants is no longer manufactured.
2010	HCFC-22	Manufacture of equipment using this refrigerant has stopped.
2020	HCFC-22	Production of this refrigerant has stopped.
2020	HCFC-123	Manufacture of equipment using this refrigerant has stopped.
2030	HCFC-123	Production of this refrigerant has stopped.

Source: E SOURCE, *Space Cooling Technology Atlas*.

## ***Chiller Rightsizing***

Depending on the upgrades implemented in Stages One through Four of the Five-Stage Approach, loads on your cooling system (see Figure 2) likely have been reduced by at least 10 percent, and perhaps by as much as 40 percent. Even if you haven't implemented those upgrades, design loads and actual building demand rarely match.

Frequently, chillers are oversized, and those in poor condition suffer downtime and significantly increased operating and maintenance costs. A new and more reliable chiller may be more cost effective. Thus, you may want to consider rightsizing your existing chiller with a new, smaller, more energy-efficient one that matches the newly reduced loads and uses new, non-CFC refrigerants. This option, however, is most profitable when your existing chiller is more than 10 years old. DOE and GSA have established a Basic Ordering Agreement (BOA) to greatly simplify procurement of energy-efficient water-cooled chillers.

### ***See Figure 2: Typical Water-Cooled Chiller System***

When you decide to replace an existing chiller with a new and more efficient unit, be sure to evaluate the initial operating and maintenance costs, the size, and the weight of the new unit. To facilitate replacement, new equipment is available from all manufacturers that can be unbolted for passage through conventional doors into equipment rooms. Keep in mind that the energy consumption of a new high-efficiency chiller could range from 15 percent to more than 50 percent less than that of the existing chiller.

Multiple chiller operations may be made more efficient by using unequally sized units. With this configuration, the smallest chiller can efficiently meet light loads. The other chillers are staged to meet higher loads after the lead chiller is operating near full capacity. If chillers operate frequently at part-load conditions, it may be cost-effective to replace a large chiller with multiple chillers staged to meet varying loads.

EPA's QuikChill software program can help you evaluate cooling loads and estimate the benefits of a more efficient chiller. This program, as well as other ENERGY STAR software programs, is available free from the ENERGY STAR web site at <http://www.epa.gov/appdstar/appd/software>.

## ***Using EPA's QuikChill Software***

QuikChill is a software tool developed to assist in analyzing the potential for investing in more efficient centrifugal chillers. QuikChill includes features that assist in decision-making regarding chiller replacement, downsizing, and CFC phase-out. With QuikChill, you can perform chiller analyses with general information about the building, allowing users to identify targets for more detailed sizing, specifications, and bidding.

To analyze the profitability of chiller investments, QuikChill looks at a simple relationship between outdoor air temperature and the cooling load that the chillers must meet. QuikChill provides a library of 16 load temperature curves for typical buildings. The user can choose from four building

types—office, education, hospital, and retail. In addition, the user can define a custom curve if one of the 16 provided does not apply to the facility.

To evaluate a chiller project, you will need to gather data about existing chillers, operating schedules, utility rate schedules, cooling tower parameters, and water reset temperatures for the condenser and evaporator. QuikChill provides chiller and project forms that can be printed out and filled in to organize the appropriate data. If information is unavailable or indefinite, use QuikChill's default values, which are available for most inputs.

After all of the input parameters for the existing chiller(s) are in place, QuikChill creates various upgrade scenarios such as consolidating existing chillers, integrating new chillers, and retrofitting existing chillers. QuikChill also calculates savings from each scenario, along with graphs of energy consumption before and after the upgrades.

## ***Upgrading Chiller Components***

Numerous components of a chiller system can be upgraded to improve system efficiency and increase cooling cost savings.

### ***Cooling Tower Improvements***

Central cooling systems generate heat that must be rejected outside the building. A cooling tower is commonly used for this purpose. All cooling towers function as large heat exchangers, transferring heat from the condenser side of the chiller to the outside air by spraying the hot water through a flow of outside air. This flow of outside air is created with centrifugal or axial fans mounted at the lower end of the tower in the **forced-draft tower**.

A second, more common type of tower, called the **induced-draft tower**, utilizes a propeller fan at the top of the tower to pull air up through the tower. The induced-draft tower offers better aerodynamics and is generally more efficient than a forced-draft tower. The forced-draft tower is generally quieter and requires less space than an induced-draft tower, but it operates at a lower efficiency. Both forced-draft and induced-draft cooling towers (see Figure 3) employ a surface contact medium or fill to increase contact surface and improve the transfer of heat between hot water from the chiller and the outside air.

## Chiller Rightsizing Case Study: An ENERGY STAR® Showcase Building

Mobil Corporation's 340,000-sf research and development building in Dallas, Texas, was upgraded over a 1-year period as an ENERGY STAR Showcase Building. The original cooling capacity of the building's chiller plant was 1,760 tons. During the first 10 years, the building's cooling load had been projected to increase to 1,805 tons primarily from heat generated by the increasing number of personal computers and related equipment. Prior to the Showcase project, Mobil was planning to replace its three R-11 chillers with larger R-123 chillers, sized to provide the additional cooling capacity. Using the Five-Stage Approach, Mobil identified profitable opportunities to reduce the building's cooling loads. Upgrades in Stages One through Four provided a total cooling load reduction of 212 tons—more than enough to eliminate the need for larger chillers.

Existing Cooling Capacity	1,760 tons
Pre-Upgrade Calculated Peak Cooling Load	1,805 tons
<i><b>Upgrades Implemented</b></i>	<i><b>Reductions</b></i>
Stage One - Lighting retrofit	45 tons
Stage Two - Peak air flow to labs reduced 10 %	115 tons
Stage Three - ENERGY STAR computers, monitor shutoff devices, Window films	38 tons
Stage Four - Variable-speed drives	14 tons
Post-Upgrade Projected Peak Cooling Load	1,593 tons

By committing to ENERGY STAR Buildings, Mobil was able to rightsize the three chillers with chillers that were smaller than originally planned. Mobil thus saved money on the first cost of the chillers and is reaping significant energy savings over the life of the chillers. The total cost of the chiller plant upgrades was \$641,000. This investment resulted in an annual cost savings of \$110,000, an annual energy savings of 10.4 percent, with an internal rate of return of 16.5 percent.

Mobil purchased the chillers before the tune-up and conversion of the return air system for lab spaces. In hindsight, had it waited to purchase the chillers last, as prescribed by the Five-Stage Approach, the lab return air conversion and tune-up would have reduced the peak cooling load by up to 120 tons and 250 tons respectively.

Mobil's experience in upgrading its R&D facility confirmed one of the basic premises of ENERGY STAR Buildings: systematically reducing cooling loads where profitable through Stages One through Four generates opportunities to profitably install rightsized, high-efficiency chillers.

**Source:** ENERGY STAR Showcase Building Project: Demonstrating Profitable Energy Savings, EPA 430-R-96-006.

### *See Figure 3: Cooling Tower Types*

Scaling, corrosion, and biological growth all impede tower efficiency and increase maintenance costs from the resultant condenser fouling and loss of heat transfer. Chemical treatment is generally used to mitigate these problems. However, new, nonchemical water treatment technologies, such as ozone generators, magnetic systems, and ultraviolet irradiation, have recently become available. Ozone is a powerful oxidant and biocide that can replace chemicals completely in some cases.

In a properly installed and operating system, bacterial counts are reduced, with a subsequent minimization of the buildup of biofilm on heat exchanger surfaces. There is also some evidence that ozone can act as a descaling agent by oxidizing the biofilm which serves as a binding agent, adhering scale to heat exchanger surfaces. The resulting reduction in energy use, increased cooling tower operating efficiency, and reduced maintenance effort provide cost savings as well as environmental benefit and regulatory compliance with respect to discharge of wastewater from blowdown. More information on ozone treatment for cooling towers can be found in the December 1995 Federal Technology Alert from FEMP. Federal Technology Alerts can be found on FEMP's website at [http://www.eren.doe/femp/prodtech/fed\\_techalert.html](http://www.eren.doe/femp/prodtech/fed_techalert.html).

**Two-speed fan** motors in combination with fan cycling provide an improvement in control and efficiency over fan cycling alone. You may have already discovered in Stage Four that **VSDs** provide the most efficient method of control. Cooling tower fans offer similar energy-saving opportunities. Fan power is proportional to the cube of the airflow rate; thus, a reduction of 20 percent in fan airflow (and speed) will correspond to a reduction of 49 percent in fan power.

### *Free Cooling (Water Side Economizer)*

An economizer allows outside air to be used for cooling when the outside temperature is lower than the temperature inside the building. Under the right conditions, free cooling or a water side economizer system can generate significant energy savings. In cooler climates, water side economizers can provide over 75 percent of the cooling requirements; in warmer climates they may provide only 20 percent. Although air side economizers, as discussed in Stages Three and Four, are typically less expensive, you should also consider using a water side economizer.

Several methods of free cooling are available. The most common method is a type of **indirect** free cooling that uses a separate heat exchanger, typically of the plate-and-frame type. It allows for a total bypass of the chiller, transferring heat directly from the chilled water circuit to the condenser water loop (see Figure 4).

A less common method is **direct** free cooling, in which the condenser and chilled water circuits are linked directly without the use of a separate heat exchanger. A disadvantage of using direct free cooling is that bacteria present in the cooling tower water system (described above) may contaminate your chilled water circuit. You can, however, install filtration systems or strainers to minimize this risk.

Facilities that require year-round cooling from high sensible heat gains would most likely benefit from direct free cooling. A large computer room or data center cooled with a central chilled water system would be a promising application.

When ambient outdoor conditions are right (that is, when the wet-bulb temperature is low enough), the chiller can be shut off and the cooling load may be served exclusively by the cooling tower without the energy-intensive mechanical refrigeration. The resulting reduction in energy consumption can be dramatic.

*See Figure 4: Indirect Water Side Economizer*

## **Pumping System Upgrades**

In buildings that use pumps to transport chilled water or condenser water, a whole-system approach can reduce pumping system energy by 50 percent or more. You can make your pumping systems more energy efficient by:

- Replacing oversized impellers, pumps, and motors with rightsized pumps and smaller, energy-efficient motors
- Installing VSDs on pump motors
- Converting single-loop configurations to primary-secondary loop configurations

### ***Rightsizing***

Rightsizing pumps to accommodate lower maximum loads can result in energy savings of up to 70 percent. The most cost-effective method is often the trimming or replacement of an oversized impeller in an existing centrifugal pump. When pump rightsizing, the maximum design capacity of the new impeller or pump must be greater than the measured maximum load for the system. Be certain that the new motor is an energy-efficient model, sized to meet the maximum load, and recognize that pump motors, like fan motors, come in incremental sizes (5 hp, 7.5 hp, 10 hp, etc.).

You can calculate your energy savings from rightsizing by comparing rated energy curves at various loads for old and new pump and motor sizes. Contact the pump manufacturer or an engineering consultant for further assistance.

### ***Variable-Speed Drives***

Installation of VSDs will ensure that your pumps are performing at maximum efficiency at part-load conditions. (See page 10 for an example of VSD savings potential.) Similar to the fan systems discussed in Stage Four, the power required to operate a pump motor is proportional to the cube of the speed. For example, in a pump system with a VSD, a load reduction that results in a 10-percent reduction in motor speed reduces energy consumption by 27 percent [ $1 - (0.9)^3 = 0.27$ ].

---

## Estimating Savings From Installing VSDs On Pumps

To estimate the annual energy savings you can gain from installing VSDs on pumps, you will need to estimate run times for all part-load conditions, based either on monitoring or load calculations. Compare the motor horsepower of the existing motor with the motor horsepower of the motor with a VSD installed under the part-load conditions. The difference in horsepower (converted to kW) multiplied by the operating hours for the range of load percentages will give you the expected energy savings in kWh.

### *Example:*

A 30-hp VSD is installed on a chilled-water pump. The existing flow rate is 1,040 gallons per minute (GPM), existing operating hours are 3,300 per year, and the pump's energy consumption is 66,900 kWh per year. The initial cost of the VSD is \$7,175.

The VSD reduces average flow to 700 GPM.

Estimated new annual energy consumption:

$$(66,900)(700 \div 1,040)3 = 20,400 \text{ kWh per year.}$$

Estimated annual energy savings:

$$(66,900 - 20,400)(\$0.08/\text{kWh}) = \$3,720 \text{ per year.}$$

$$\text{Simple payback} = \$7,175 \div \$3,720 = 1.9 \text{ years}$$

---

When installing VSDs, be sure to:

- Complete harmonic, power factor, and torsional analyses before installation
- Conduct a coastdown test to compare mechanical resonance with speed response
- Ensure that maximum and minimum flow rates through the chiller can be met with chiller pump upgrades

### ***Single-Loop Conversions***

Chiller applications have a rated minimum flow for chilled water through the chiller typically 70 percent of maximum which also applies to VSD flow reductions. However, a primary-secondary loop configuration, also known as a production-distribution configuration, can allow for greater energy savings without compromising your chiller performance. With the primary-secondary loop configuration (see Figure 5), your chiller is equipped with smaller chilled-water pumps, or primary pumps. These are constant-flow pumps that operate with a lower pressure drop than in a single-loop

configuration. Variable-flow secondary pumps then distribute the chilled water through your building's end-use air-handling devices and have the capability of reducing their speed at part-load conditions.

When converting from a single-loop configuration to a primary-secondary configuration, be sure to:

- Pipe the lower velocity chiller bypass water on the production side to flow into the higher velocity chilled water return on the distribution side and not vice versa
- Replace three-way valves at air-handling unit coils with two-way valves
- Maintain maximum and minimum flow rates through the chiller

*See Figure 5: Primary/Secondary Pumping Loop*

## Central Heating Systems: Best Opportunities

### ***Boiler System Upgrades***

Approximately 40 percent of all commercial buildings use boilers for space heating (see Figure 6). Of these, roughly 65 percent are gas fired, 28 percent are oil fired, and 7 percent are electric. The combustion efficiency of older boilers is generally between 65 percent and 75 percent, although inefficient boilers can have efficiencies between 40 percent and 60 percent. New, energy-efficient gas- or oil-fired boiler systems can have efficiencies between 85 and 95 percent.

*See Figure 6: Boiler Components*

The Five-Stage Approach can reduce boiler system energy consumption by 10 to 30 percent. You can make your boiler system more energy efficient by either:

- Replacing your existing boiler system with a new, rightsized, more energy-efficient boiler system
- Retrofitting your boiler so that it can perform more efficiently

### ***Boiler Rightsizing***

Before tackling the boiler itself, examine the radiators. Radiators that operate at full output are common in older office buildings. Adding thermostatic valves that control hot water or steam output to each radiator enables occupants to maintain comfort without opening windows in the winter. In some cases, adding radiator controls can cut steam or hot water use by one-third.

The best opportunities for energy savings come with replacing an old or inefficient boiler with a more efficient boiler system. Newer, energy-efficient boilers have increased heating surface areas and improved controls for fuel and airflow over the range of load conditions. Before replacing your boiler:

- Determine your building's heating load and rightsize your boiler accordingly
- Plan to rightsize your boiler with an energy-efficient model
- Determine the applicability of converting from a single-boiler system to a staged system of smaller, more energy-efficient boilers operating in combination
- When replacing old equipment or installing new equipment, consider the advantages that multiple boiler systems offer. Multiple boiler systems are more efficient than single boilers, especially under part-load conditions

To determine whether you should replace your boiler system, you need to understand your building's heating load and your existing boiler's efficiency. You can calculate the energy savings from replacing a boiler by comparing rated energy consumption at various loads for the old and new boiler systems. Contact the boiler manufacturer or an engineering consultant for further assistance. Some utilities will provide this service free of charge.

### ***Boiler Retrofit***

Retrofitting existing boilers can dramatically improve the peak- and part-load efficiency of your boiler. It can also extend the useful life of your heating systems. Your best options include:

- **New Burners**—More efficient burners improve fuel combustion and reduce emissions of nitrogen oxide
- **Temperature/Pressure Reset**—Temperature and pressure reset controls provide significant energy savings by minimizing fuel waste. Reset controls match the supply of steam with the demand for heat instead of supplying steam at a higher pressure than is needed. The system water temperature is reset based on the outdoor temperature. If outdoor temperature increases, the system water temperature is lowered
- **Boiler Economizer**—A boiler economizer captures waste heat in the exhaust flue gases and uses it to preheat the recovery feedwater. Efficiency increases about 1 percent for every 10°F increase in feedwater temperature. When natural gas fuels the boiler, it is important to maintain the stack temperature at a minimum of 250° F to avoid condensation of the water vapor in the flue gases. The figure below shows the percentage of fuel saved as a function of the percentage of excess air for different stack temperatures from a gas-fired boiler. For example, with the use of an economizer, a boiler operating at a stack temperature of 500° F and 80 percent excess air would realize a 7 percent fuel savings (see Figure 7)
- **Baffle Inserts**—Baffle inserts induce combustion gases to flow in a turbulent spiral pattern which increases the efficiency of heat transfer

*See Figure 7: Boiler Economizer Fuel Energy Savings*

As discussed in Stage Two—Building Tune-Up, improved operation and maintenance are important parts of your overall strategy and can provide significant energy savings. An annual tune-up, improved water treatment, and a preventative maintenance program can reduce boiler energy waste by as much as 15 percent.

Hot flue gases from boilers can provide a source of waste heat for a variety of uses. The most common use is for pre-heating boiler feed water. Heat exchangers used in flues must be constructed to withstand the highly corrosive nature of cooled flue gases.

## ***Furnace Upgrades***

Furnaces are heating plants that produce heat for the purpose of providing thermal comfort for your building. The heat source can be fuel oil, natural gas, electricity, coal, or wood. The main components of a warm-air furnace are the heat exchanger, fuel burner, blower or fan, controls, and housing.

A whole-system approach can reduce your furnace energy consumption 5 percent to 25 percent. You can make your furnace more energy efficient by:

- Replacing your existing furnace with a new, rightsized, more energy-efficient furnace
- Retrofitting your furnace with additional controls so that it can perform more efficiently

### ***Furnace Rightsizing***

Standard combustion furnaces have a steady-state efficiency of about 80 percent. High-efficiency furnaces built with condensing heat exchangers have a steady-state efficiency as high as 94 percent. If your furnace is more than 10 years old, you should:

- Measure your heating loads
- Evaluate your existing furnace in terms of efficiency and capacity
- Determine the benefits of installing a new, rightsized energy-efficient model

### ***Furnace Retrofit***

Retrofitting existing furnaces can significantly increase your energy savings. Your best options are to:

- **Install new burners**—More efficient burners improve fuel combustion and reduce emissions of nitrogen oxide
- **Install two-stage setback controls**—In electrically heated spaces where the temperature is reduced during unoccupied periods, the electric demand needed to bring the space back to its original temperature can be significant. In this case, if your electric rate structure includes demand charges, install a two-stage setback thermostat with staged supplemental heat and a programmable demand limiter to prevent demand peaks in the morning. Consider alternatives to resistance heating to reduce heating costs and overall impact on the environment

As discussed in StageTwo—Building Tune-Up, improved operation and maintenance of your systems save energy—often in significant amounts. As with boiler systems, an annual tune-up and a preventative maintenance program are crucial to achieving and sustaining these savings.

## Unitary Systems: Best Opportunities

Unitary systems are factory-assembled cooling, or combined heating and cooling, systems. Cabinet- or skid-mounted for easy installation, typical units generally consist of an evaporator, blower, compressor, condenser, and, if a combined system, a heating section. The size of the units ranges from approximately 1.5 to 130 tons.

Typical unitary systems are single-packaged units, split-system packaged units, heat pump systems, and water-source heat pump systems. Compared to central chiller plants, unitary systems do not last as long (only 12 to 15 years) and are less efficient. Unitary systems are generally used in one, two, or three-story buildings that have small cooling loads, such as retail spaces, small office buildings, and classrooms.

Generally speaking, it is not feasible to convert a building from packaged units to central chilling. However, it is not always necessary to replace in kind. (See the heat pump and additional strategies sections for conversion options, pages 18 and 19.)

Whether your building uses unitary systems for cooling, heating, or both, you can benefit from the Five-Stage Approach. Depending on the upgrades you have implemented in Stages One through Four, cooling load requirements have probably been reduced between 10 percent and 40 percent.

As with chillers, existing unitary systems are, in many cases, oversized. Likewise, unitary systems that are in poor condition suffer downtime and significantly increased operating and maintenance costs. A new and more reliable unitary system may be more cost effective. If your unitary systems are 10 years old or older, you can realize energy savings by replacing unitary systems with rightsized, energy-efficient models.

### *Rightsizing*

Rightsizing your unitary systems to maximize the benefits of the cooling and heating load reductions in Stages One through Four can result in significant energy savings. When determining the rightsizing potential of your unitary system, be sure to measure your cooling and heating loads first. By knowing what your cooling and heating loads are, you will be better able to rightsize your new unitary system to meet maximum loads.

To estimate your energy savings from rightsizing, first measure your cooling and heating loads. Then, using the **seasonal energy-efficiency ratio (SEER)** for your old and new systems, compare their respective energy consumption. Contact your equipment manufacturer or an engineering consultant for further assistance.

Typically, federal buildings will use unitary systems with cooling capacities greater than 5 tons. In some cases, however, for smaller buildings or due to space requirements, physical limitations, or

small additions, residential-sized unitary systems are used. In these cases, be sure to look for the ENERGY STAR Label. The ENERGY STAR Label is found on various high-efficiency heating, cooling, and control products and can help you differentiate between these and standard-efficiency products. To determine what products may meet your needs, visit the ENERGY STAR web site at <http://www.epa.gov/energystar>.

The information about the technologies listed below will help you better understand your unitary system and recent technological advances that may increase its rightsizing potential.

- Packaged or rooftop units
- Vertical packaged units
- Split-system packaged unit
- Air-source heat pumps
- Water-loop heat pump systems

### ***Packaged Or Rooftop Units***

Packaged units are packaged HVAC units that are usually mounted on the roof, freeing up valuable indoor floor space. They can also be installed on a concrete pad at ground level. Because they are self-contained, manufactured units, installation costs are low.

Single-package units consist of a blower section, filter bank, evaporator coil, at least one compressor (larger units may have more than one), and an air-cooled condenser section (see Figure 8). Units may also come equipped with a heating section.

Heating is accomplished using either natural gas or electricity; however, natural gas is generally less expensive, depending on the region. Heat pump systems can be used in situations where electricity is the only source of energy; however, unitary heat pump units are restricted in size to no more than 20 tons. Heat pump systems are discussed further below.

As packaged units age and deteriorate, their efficiency often decreases while the need for maintenance increases. For example, a dirty condenser coil that raises condensing temperature from 95°F to 105°F cuts cooling capacity 7 percent and increases power consumption 10 percent, with a net (compressor) efficiency reduction of 16 percent. In a 10-ton unit operating 2,000 hours per year, this wastes about \$250 in operating costs. A technician can clean the condenser in about an hour, which typically costs about \$50. In this example, payback takes just over two months and brings net annual savings of \$200.

Upgrading your packaged units to high-efficiency models will also result in substantial long-term energy savings.

*See Figure 8: Self-Contained Packaged AC Unit*

In the last 10 to 15 years, manufacturers have made significant improvements to the efficiency of packaged units. The efficiency of heat transfer at both the evaporator and condenser coils has been improved; high-efficiency motors are now standard; and blower and compressor designs have

improved in high-efficiency packaged units. Scroll compressors are now commonplace on medium-sized (20- to 60-ton) rooftop units. Energy efficiencies of newer units have a SEER in the range of 9.50 to 13.0. It is not uncommon to find older units operating at efficiencies as low as 6.0, and most operate at less than 9.0. Gas-fired heating sections typically have an annual fuel utilization efficiency (AFUE) of about 80 percent.

---

### Case Study: Installing High-Efficiency Packaged Units Can Cut Energy Costs

For a typical 100,000-sf office building that has 10 standard 25-ton packaged units with a SEER rating of 9 and 80 percent electric heat efficiency, electricity costs would be about \$71,300 per year (\$53,300 for cooling and \$18,000 for heating, at \$0.08 per kWh).

Installing a new energy-efficient unit with a cooling energy-efficiency rating of 13 would result in cooling mode electricity costs of about \$36,900 annually—a savings of \$16,400 per year. If the heating component of the system was improved to 90 percent efficiency, the heating savings would be \$2,000 per year. The combined annual savings of \$18,400 equals a reduction in energy costs of more than 25 percent.

(The cooling units are assumed to operate for 2,000 hours per year, while the heating units are assumed to run for 1,000 hours per year.)

---

All newer packaged rooftop units are equipped with factory-installed microprocessor controls. These controls make maintaining equipment easier and improve the energy efficiency of both the unit and the overall HVAC system. Control features include temperature setback and on/off scheduling. Large systems have variable air volume capability, as discussed in Stage Four—Fan System Upgrades. Also, most units have an optional communication interface for connection to an EMS system.

### ***Vertical Packaged Units***

Other unitary systems, if upgraded to high-efficiency systems, offer much the same potential for energy savings. **Vertical packaged units** (see Figure 9), which are a variation on the packaged unit, are typically designed for indoor installation. Most units have a water-cooled condenser, which can be fed from a cooling tower and/or city water. Other components are mounted in the package. Ductwork can be connected to the unit to distribute the air.

## ***Split-System Packaged Units***

**Split-system packaged units** (see Figure 10) have an outdoor pad or rooftop-mounted air-cooled condenser. Refrigerant piping connects the compressor section to an indoor air-handling unit and evaporator coil.

Unless they are heat pump type units, they cannot provide heat to the space. Heating coils can be installed in the air-handling section, particularly if there is a central source of heat such as hot water or steam from a boiler.

*See Figure 9: Vertical Packaged Units*

*See Figure 10: Split-System Packaged Units*

## ***Air-Source Heat Pumps***

**Air-source heat pump systems** are typically rooftop units, packaged either complete or as split systems. During cooling mode, the unit operates as a typical air-conditioning system. During heating mode, the cooling system is reversed completely to extract heat from the outside air and to provide it to the space. The size of unitary heat pump systems ranges from approximately 1.5 tons to 20 tons. In some cases, existing packaged cooling units with electric resistance heat can be upgraded to heat pumps for improved energy efficiency.

Heat pump applications are best suited to relatively warm climates, such as the Southeastern United States, and to areas where natural gas for heating is less available. When temperatures are low, the **coefficient of performance (COP)** of the heat pump falls dramatically. A 7.5-ton rooftop heat pump unit that has a high-temperature COP of 3.0 can have a low-temperature COP of 2.0 or less. Moreover, when the temperature drops further, heat pumps require supplemental electric resistance heat; thus, effective heating efficiencies become even lower.

Split-package heat pumps are designed with an air-handling unit located inside the conditioned space, and both the condenser and compressor are packaged in units for outdoor installation on a pad or on the roof.

Due to their improved annual efficiency, air-source heat pumps are good candidates for replacing packaged cooling units with electric-resistance heating coils.

## ***Water-Loop Heat Pump Systems***

**Water-loop, or water-source, heat pump systems** use water instead of air to transfer heat. In an air-to-air heat pump system, heat is removed from indoor air and rejected to outside air during the cooling cycle. The reverse happens during the heating cycle. However, in a water-loop heat pump, water replaces the outdoor air as the source or sink for heat, depending on the cycle in use.

In hot weather, a cooling tower removes heat from the water loop; in cooler weather, a central boiler heats the water.

As shown in Figure 11, water-loop heat pump systems allow for simultaneous heating and cooling by multiple separate and distinct units, and thus increase individual comfort. Furthermore, recovering heat from cooled areas and recycling it into other areas adds to the system's efficiency.

The size of water-source heat pumps ranges from approximately 0.5 tons to 25 tons. Efficiencies of water-source units are generally higher than their air-to-air counterparts, where a SEER of 11.0 and COP of 3.8 to 4.0 are not uncommon. High-efficiency water-source heat pumps have a SEER as high as 14.0 to 15.0 and a COP as high as 4.4.

*See Figure 11: Water-Loop Heat Pump System*

## **Additional Strategies: Best Opportunities**

In addition to the strategies outlined in previous sections, other worthwhile technological strategies warrant further attention for some applications. Whether or not these strategies are viable for your building depends upon various conditions (for example, size, location, types of business onsite, utility rate structures). These strategies include the following:

### ***Heating And Cooling Strategies***

- Geothermal heat pumps
- District heating and cooling
- Radiant heating and cooling

### ***Cooling Strategies***

- Cool storage
- High temperature-difference distribution
- Evaporative cooling
- Non-electric cooling

## ***Geothermal Heat Pumps (GHPs)***

An additional strategy for improving the efficiency of your HVAC equipment is the GHP. Geothermal heat pumps take advantage of the natural heat stored underground to provide space conditioning heating, cooling, and humidity control. Rather than converting chemical energy to heat, as in a furnace, GHPs work by moving heat. During the heating season, a GHP can move heat taken from the ground and apply it to a building. In the cooling season, this process is reversed, as the building's excess heat is moved back to the ground to provide air conditioning. (See *A Short Primer and Environmental Guidance for Geothermal Heat Pumps*, EPA 430-K-97-007, available from 1-888-STAR YES).

There are two major types of GHPs. The earth-coupled (or closed loop) GHP uses sealed horizontal or vertical pipes as heat exchangers through which water, or water and antifreeze, transfer heat to or from the ground. The second type, the water-source (or open-loop) GHP, pumps water from a well or other source to the heat exchanger, then back to the source. Because of their versatility, earth-

coupled systems dominate the GHP market. Typical loop installations for the earth-coupled systems are expected to work for 50 years.

Due to the relative stability of ground temperature, GHP systems are inherently more efficient than air-source heat pumps, which rely on outside air as the medium which receives heat from the heat pump or from which heat is extracted by the heat pump. GHP systems provide the highest efficiencies in both cooling and heating seasons, as well as in heating water.

Information on GHP systems is available from the ENERGY STAR Web site at <http://www.epa.gov/appdstar/hvac/geothermal.html>. For additional information, visit the Geothermal Heat Pump Consortium Web site at <http://www.geoexchange.org>, and the DOE Office of Geothermal Technologies site at <http://www.eren.doe.gov/geothermal>. Also, refer to the DOE Federal Technology Alert published in September 1995 on ground-source heat pumps. This can be found at <http://www.pnl.gov/fta/2.ground.htm>.

Currently, a few major utilities, hundreds of rural electric cooperatives, and a few states provide incentives valued at as much as \$3,000 per residential installation. Some utilities are tailoring their demand-side management programs, particularly for large energy users such as the Federal Government. Negotiating with such utilities may lead to increased funding, services such as design assistance, or both, especially for nonresidential facilities.

## ***District Heating And Cooling***

District cooling is a shift in the generation location of chilled water from inside a facility to a local chilled-water producer. As a district cooling customer, your facility would purchase chilled water from a generation plant just as you purchase power from a local utility company. Chilled-water plants supply water to a number of customers within the plant district territory, usually encompassing a radius of three to five city blocks.

There are several advantages to district cooling:

- Most district cooling plants are modern facilities that use energy-efficient generation methods
- The need for buildings to own and use refrigerants is eliminated along with refrigerant compliance responsibilities, handling regulations, rising replacement costs, and capacity-loss issues
- Ice can be generated at off-peak hours (when utility demand and rates are lowest) and used at peak cooling periods to supplement chilled-water production, yielding a lower chilled-water temperature. This lower temperature means that high temperature-difference distribution may be viable, as discussed below
- Chilled water can be purchased without the expense of installing, operating, or maintaining one's own chiller
- The centralized nature of district heating and cooling energy production plants results in a reduced number of emissions sources in a community

This strategy is applicable for some facilities in cities, campuses, or industrial parks. District heating and cooling eliminates central heating and/or cooling equipment. Also, because district

cooling suppliers use modern, non-CFC chillers, CFC chiller equipment in your building can be retired.

## ***Radiant Heating And Cooling***

Radiant heating and cooling, also called hydronic heating and cooling, differs from standard HVAC design in that it uses water distribution instead of air distribution to meet a building's heating and cooling needs.

In a radiant cooling system, cold water is pumped through special panels or grids of tubing mounted in the walls, ceilings, or floors. These panels absorb heat from the building and bring it back to the HVAC plant to be removed from the building.

As discussed in Stages Three and Four, the amount of outdoor air required to ventilate your building is actually much smaller than the amount of air that must be circulated through cooling coils to handle cooling load. Radiant systems cool the space directly, reducing your ventilation system to the size required to bring in outside air. This requirement is about 20 percent of the total air recirculation capacity of the average building. As water has a much higher capacity to store heat or cold than air, a much smaller volume of water can be circulated, further reducing costs. Radiant cooling can supply the same cooling capacity as other systems but at levels of energy consumption that are typically about 75 percent of those for air-based systems.

## ***Cool Storage***

Cool storage is a means of using less expensive off-peak power to produce cooling for the building. Cool storage is based upon the principle that a storage medium can be cooled while chiller operating cost is low, and the storage can be discharged when chiller operating cost is high. Furthermore, chillers tend to be most economical to operate at night, when building cooling loads are low, electric rates may be lower, and lower outdoor temperatures allow the chiller to reject heat more efficiently. Cooling energy is stored in tanks of either water, ice and water, or water circulating around chemical modules that freeze and thaw. This last system, as well as an ice-based system, has the advantage of taking up less space than chilled-water storage because the freezing process can naturally store much more "cold" in a given volume (1 ton-hour of cooling per approximately 1.5 cubic feet).

Generally, the most cost effective type of cool-storage design and operating strategy is the partial-storage system shown in Figure 12. A partial storage system reduces a building's maximum electrical demand by shifting a portion of the cooling load from daytime to nighttime. The total chiller capacity required for the building is also less than that of a standard system.

The cost effectiveness of cool-storage systems varies considerably depending on the specific application. However, high electric-utility peak-demand charges, which generally coincide with the peak cooling period in the afternoon, and a time-of-use rate with a low nighttime kWh charge are factors that make it favorable to shift cooling equipment operation away from the utility peak period. A cool storage system is most cost effective when its capital cost is viewed as an

incremental cost compared to replacing or constructing a new chilled-water system. More information can be found at the FEMP web site at <http://www.eren.doe.gov/femp/prodtech/icesum.html>.

*See Figure 12: Partial-Storage Strategy*

## **High Temperature-Difference Distribution**

Designing or modifying the chilled-water distribution system to have a lower supply temperature and a higher return temperature than normal provides more cooling capacity for the same amount of chilled-water flow. Increasing the difference between the supply and return temperatures by a certain percentage reduces the required water flow by the same percentage. Such a reduction in chilled-water flow can substantially reduce required pumping energy.

Because a chiller operates less efficiently as it supplies colder chilled water, high temperature-difference distribution systems are most appropriate when combined with cool-storage systems, as discussed above. To reduce the required tank size, cool-storage tanks containing ice or water are generally at lower-than-standard supply temperature.

High temperature-difference distribution systems are most cost effective in new construction, because reduced chilled-water flow requirements reduce the capital cost of pumps, piping, and heat exchangers.

## **Evaporative Cooling**

The process of evaporating water or another fluid absorbs heat, just as a kettle must be heated before the water must boil. This is the basis for many types of mechanical cooling. A much simpler and more economical variation can be used in some climates. Cooling is produced by passing a flow of dry air over a wet surface. As the water evaporates from the surface, the air stream is cooled. Although evaporative cooling systems are most effective in dry climates, where the air has a large capacity to absorb evaporating water, they can also be used elsewhere to reduce the annual cooling load on mechanical refrigeration equipment.

There are both direct and indirect types of evaporative coolers and systems used in conjunction with mechanical refrigeration. Direct evaporation systems evaporate water directly into the supply air stream, whereas indirect systems cool one air stream that in turn cools the supply air stream through a heat exchanger. Although indirect systems are more costly, they avoid increasing the humidity of supply air. Evaporative cooling can also be used to precool air to reduce the load on a mechanical refrigeration system. Mechanical refrigeration can be used to increase the evaporative cooling capacity by cooling the water used for evaporation.

Compared with standard unitary air-conditioning equipment, indirect evaporative coolers have been shown to use 70 percent less electricity seasonally. While evaporative cooling equipment generally offers reduced cooling capacity compared to mechanical refrigeration, indirect evaporative precooling can supply half of the annual cooling load in many areas (ASHRAE, 1995, *Applications*

*Handbook*, Ch. 47). Information on one method of evaporative cooling can be found at the FEMP web site at <http://www.eren.doe.gov/femp/whitecap.html>.

## ***Nonelectric Cooling***

While the most common cooling plants use an electric motor to drive a refrigerant compressor, there are nonelectric alternatives, such as engine-driven, steam turbine-driven, and absorption chillers. While nonelectric cooling systems are often less expensive to operate, their first cost is higher than that of electric systems, and they come with increased equipment size and maintenance costs.

**Gas engine-driven chillers** are a cost-effective option for producing chilled water in areas where gas rates are lower than electric rates. Gas engine-driven chillers are much like electric chillers, except that they contain an engine rather than a motor. Where there is a need for heating during the cooling season, heat recovery from both the exhaust and cooling water can improve the efficiency of these systems. Gas engine-driven chillers have average operating COPs of 1.7 to 1.9. If heat recovery from the exhaust and water jacket are implemented, their efficiency can increase to 2.3 COP. While the efficiency of gas engine-driven chillers is much lower than that of electric chillers, total fuel use and pollution emissions can be comparable when considering electric power plant operations. The centrifugal or screw chiller driven by the engine uses an HCFC or HFC refrigerant, much like an electric chiller. A case study of a gas-engine-driven rooftop air conditioning unit can be found at the FEMP web site at <http://www.eren.doe.gov/femp/willow.html>.

**Absorption chillers** do not use the vapor compression cycle that most mechanical refrigeration uses; instead, they are "driven" by heat, not by a mechanical drive input. Moreover, they use water as a refrigerant in conjunction with lithium bromide as the absorption chemical (or ammonia and water) such that there is no ozone-depletion potential from the system. Although the system has fewer moving parts than a centrifugal chiller, it is technically complex.

There are single- and double-effect absorption systems, and they may be fired directly with a gas burner or indirectly with steam generated by separate equipment. Single-effect systems have a COP of 0.5 to 0.7. Double-effect systems are more efficient, with a COP of 1.0 to 1.1. Triple-effect absorbers are also under development and promise still better efficiency. In addition, chiller-heaters, which use absorption technology to provide cooling, heating, or both cooling and heating as required, are available.

**Steam turbines** can be used to drive centrifugal compressors. The chilled medium is usually water or brine, with a halogenated hydrocarbon refrigerant. Other refrigerants such as ammonia, butane, or propane are also used in industrial processes.

## Summary

This section has described numerous opportunities for optimizing both the size and efficiency of your building's heating and cooling systems. Before undertaking any of these strategies, you should measure your building's heating and cooling loads. Having done so, retrofit or rightsize your heating and cooling equipment based on the load reductions implemented in Stages One through Four of the Five-Stage Approach.

To find the most efficient equipment for your building's cooling and heating systems, consult the American Council for an Energy Efficient Economy's (ACEEE's) *Guide To Energy-Efficient Commercial Equipment*.

Information on greening Federal facilities can be found at <http://www.eren.doe.gov/femp/greenfed/index.html>.

Federal energy managers with access to the Internet may also find recommendations for energy-efficient building equipment at: <http://www.eren.doe.gov/femp/procurement>.

## Next Steps

Measure your cooling and heating loads and complete the Heating and Cooling Survey at the end of this document.

### Cooling Systems

- Estimate your savings with QuikChill
- Rightsize your cooling system to take advantage of load reductions from ENERGY STAR Stages One through Four
- Eliminate CFC refrigerants from your chiller system by retrofitting or replacing your chiller
- Older chillers represent an investment opportunity. Install new high-efficiency chillers to reduce operating costs and match equipment size to cooling load
- Improve cooling towers and install VSD controls with rightsized pumps
- Implement cooling system efficiency strategies such as free cooling

### Heating Systems

- Replace older boilers and furnaces or upgrade components and controls of existing units

### Unitary Systems

- Replace older unitary equipment with high-efficiency equivalents or heat pumps

### *Additional Strategies*

- When evaluating your upgrade options, assess whether your building's specific characteristics lend themselves to:
  - Geothermal heat pumps
  - District heating and cooling
  - Radiant heating and cooling
  - Cool storage
  - High temperature-difference distribution
  - Evaporative cooling
  - Nonelectric cooling

## Glossary

**AHU**

See *air-handling unit*.

***air-handling unit (AHU)***

Equipment used to distribute conditioned air to a space. Includes heating and cooling coils, fans, ducts, and filters.

***air side systems***

Equipment used to heat, cool, and transport air within building HVAC systems.

**ARI**

Air-Conditioning and Refrigeration Institute.

**ASHRAE**

American Society of Heating, Refrigerating, and Air-Conditioning Engineers, Inc.

**ASME**

American Society of Mechanical Engineers.

***boiler***

Pressure vessel designed to transfer heat produced by combustion or electric resistance to a fluid. In most boilers, the fluid is usually water in the form of liquid or steam.

***calibration***

Process of adjusting equipment to ensure that operation is within design parameters.

***carbon dioxide***

Colorless, odorless, incombustible gas formed during respiration, combustion, and organic decomposition. Increasing amounts of carbon dioxide in the atmosphere are believed to contribute to the global warming phenomenon.

**CAV**

See *constant volume*.

**CFCs**

See *chlorofluorocarbons*.

***chiller***

Mechanical device that generates cold liquid, which is circulated through cooling coils to cool the air supplied to a building.

***chlorofluorocarbons***

Chemical compounds consisting of carbon, hydrogen, chlorine, and fluorine, once used widely as aerosol propellants and refrigerants. Believed to cause depletion of the atmospheric ozone layer.

***coefficient of performance (COP)***

A measure of efficiency in which a higher value designates a more efficient system.

***coil, condenser***

A heat exchanger used to condense refrigerant from a gas to a liquid.

***coil, cooling***

Heat exchanger used to cool air under forced convection, with or without dehumidification. May consist of a single coil section or several coil sections assembled into a bank.

***coil, heating***

Heat exchanger that heats air under forced convection. May consist of a single coil section or several coil sections assembled into a bank.

***condenser***

Heat exchanger used to expel building heat absorbed in the evaporator of a refrigeration system.

***constant volume (CAV, constant air volume).***

Type of air-handling system that maintains comfort in buildings by providing a constant air flow and varying the air temperature.

***control***

Device that analyzes the difference between an actual process value and a desired process value and brings the actual value closer to the desired value.

***cooling tower***

Device that dissipates heat from water-cooled systems through a combination of heat and mass transfer, whereby the water to be cooled is distributed in the tower and exposed to circulated ambient air.

***COP***

See *coefficient of performance*.

***dampers***

Single- or multiple-blade devices, either manually or automatically opened or closed, that control the flow of air.

***demand charges***

Fees levied by a utility company for electric demand.

***direct expansion system***

Cooling system in which the refrigerant runs in the cooling coil to cool the air directly; that is, there is no water loop between the refrigerant and the air to be cooled.

***downsizing***

Process of reducing the size (capacity) of equipment so that it operates efficiently at design load conditions.

***EER***

Energy Efficiency Ratio. Cooling capacity (Btu/hr) divided by total input power (watts) requirement.

***efficiency***

Ratio of power output to power input.

***EMS***

See *energy management system*.

***energy management system (EMS)***

The control system that monitors the environment and energy usage in a building and alters equipment operation to conserve energy while providing occupant comfort.

***fan, cooling tower***

Fans that are used to draw air through the cooling tower to carry away water vapor.

***gasket***

Material used to seal a joint against leakage.

***GPM***

Gallons per minute. A measure of water flow rate.

***heat-exchange area***

Area where heat is transferred from one medium to another.

***heat pump***

Device that extracts heat from one medium and transfers it to another portion of the same medium or to a second medium at a higher temperature.

***HVAC***

Heating, ventilating, and air-conditioning.

***IEEE***

Institute of Electrical and Electronic Engineers.

***internal rate of return (IRR)***

Compound interest rate at which the total discounted benefits become equal to total discounted costs for a particular investment.

***IRR***

See *internal rate of return*.

***kilowatt (kW)***

Unit of power equal to 1,000 watts.

***kilowatt-hour (kWh)***

Unit of electric consumption equal to the work done by one kilowatt acting for one hour.

***kW***

See *kilowatt*.

***KWh***

See *kilowatt-hour*.

***load, cooling***

Cooling (typically measured in Btu/hr or tons) required to maintain an indoor design temperature.

***part-load conditions***

Time when equipment is operating at less than design loads; represents the majority of the time equipment is operating.

***payback***

See *payback, simple*.

***payback, simple***

Also known as *payback*. Measurement of the elapsed time between an initial investment and the point at which accumulated savings are sufficient to offset the initial investment.

***peak (cooling) load***

Maximum cooling required to maintain an indoor design temperature under the most adverse summertime outdoor air conditions.

***pump, chilled-water***

Device that circulates chilled water.

***pump, condenser-water***

Device that circulates condenser water.

***refrigerant***

Substance, such as *CFCs*, *HCFCs*, *HFCs*, air, ammonia, water, or carbon dioxide, used to provide cooling by evaporation and condensation.

***seasonal energy-efficiency ratio (SEER)***

Cooling capacity (Btu/hr) divided by total input power (watts) requirement where both are seasonal averages.

**SEER**

See *seasonal energy-efficiency ratio*.

**setpoint**

Desired temperature, humidity, or pressure in a space, duct, etc.

**space**

The distinct area to which conditioned air is delivered.

**strainer screen**

Filtering device used in water side systems to protect equipment from dirt, rust, and other particles.

**TAB**

See *testing, adjusting, and balancing*.

**ton**

Unit of cooling capacity equal to 12,000 Btu/hr.

**variable air volume (VAV)**

A type of air-handling system that maintains comfort in a building by varying the quantity of air supplied through the building.

**variable-speed drive (VSD)**

A device used to adjust the speed of an AC motor to match load requirements.

**VAV**

See *variable air volume*.

**VSD**

See *variable speed drive*.

**water side systems**

Equipment used to supply heating and cooling for air side systems. Includes pumps, chillers, boilers, and other devices.

## Bibliography

ACEEE. *Guide To Energy-Efficient Commercial Equipment*. Washington, DC: The American Council For An Energy-Efficient Economy, 1997.

ASHRAE. *HVAC Applications Handbook*. Atlanta: ASHRAE, 1995.

ASHRAE. *HVAC Systems And Equipment Handbook*. Atlanta: ASHRAE, 1996. Cleaver Brooks. *The Boiler Book, Systems Fundamentals*. Milwaukee, WI: Cleaver Brooks Division, Aqua-Chem, Inc., 1995.

E SOURCE. *Commercial Space Cooling Technology Atlas*. Boulder, CO: E SOURCE, 1995.

E SOURCE. *Space Heating Technology Atlas*. Boulder, CO: E SOURCE, 1993.

Turner, Wayne C. *Energy Management Handbook*. 2nd ed. Lilburn, GA: The Fairmont Press Inc., 1993.

U.S. Environmental Protection Agency. QuikChill software program. ENERGY STAR web site: [www.epa.gov/appdstar/appd/software](http://www.epa.gov/appdstar/appd/software).

## Appendix: Heating And Cooling Survey

### ***Measure Heating And Cooling Loads To Rightsize Systems***

This survey will familiarize you with the condition of your heating and cooling systems and enable you to determine whether your heating and cooling equipment needs replacing with rightsized, energy-efficient equipment.

To prepare to rightsize your heating and cooling systems, compile basic information and measurements about the systems and your facility. Next, calculate the required cooling and heating loads for your building.

To get started, recruit a survey team including a building engineer, HVAC technician, boiler operator, and electrician. You will need to evaluate your available staff resources and staff capabilities. If you do not have the means of taking these measurements, you may want to contact an independent *testing, adjusting and balancing* (TAB) firm or seek outside engineering services.

### ***QuikChill Software***

QuikChill is a software tool developed to assist in analyzing the potential for investing in more efficient centrifugal chillers. QuikChill includes features that assist in decisionmaking regarding chiller replacement, downsizing, and CFC phaseout. With QuikChill, you can perform chiller analyses without detailed information about the building, allowing you to identify targets for more detailed sizing, specification, and bidding.

Preparing to evaluate a chiller project requires gathering data about existing chiller(s), operating schedules, utility rate schedules, cooling tower parameters, and water reset temperatures for the condenser and evaporator. To facilitate data entry, QuikChill provides chiller and project forms that can be printed out and filled in to organize the appropriate data. If information is unavailable or indefinite, QuikChill default values, which are available for most inputs, can be used.

QuikChill is available free from the ENERGY STAR hotline at 1-888-STAR YES, or the ENERGY STAR web site at: <http://www.epa.gov/appdstar/appd/quikchil.html>.

### ***Before You Begin***

You will need the following items to complete your survey:

- The latest specifications for the heating and cooling equipment in your building
- The TAB report for your building's pumping systems
- "As built" mechanical drawings
- Operations and maintenance manuals for the boiler, chiller, or unitary system equipment
- The system logs showing hot and chilled water supply and chilled-water return temperatures and flow rates (if you have an energy management system)

- A data logger (note: for unitary systems only)
- A calculator

### Chiller Systems Survey

*Collect the following information:*

Chiller Type  
(choose one)

- ☐ Air-cooled centrifugal
- ☐ Water-cooled centrifugal
- ☐ Reciprocating
- ☐ Helical rotary/screw
- ☐ Steam absorption
- ☐ Hot-water absorption
- ☐ Direct-fired absorption
- ☐ Engine-driven

Manufacturer \_\_\_\_\_

Type of Refrigerant \_\_\_\_\_

Age \_\_\_\_\_

Efficiency (kW/ton) \_\_\_\_\_

Size or Capacity (in tons) \_\_\_\_\_

(12,000 Btu/hr = 1 ton)

---

*Calculate the maximum cooling load for your building using the following procedure:*

What is the maximum cooling load for the building (in tons)? This load will be compared with the chiller capacity recorded above. To determine maximum cooling load, take the following measurements in the afternoon on a typical hot summer day to capture peak load effects on your system. *Note: An energy management system may also log these measurements.*

- Temperature of the chilled-water supply (CHWS). A temperature gauge should be found on the pipe at the chiller's supply outlet
- Temperature of the chilled-water return (CHWR). A temperature gauge should be found on the pipe at the chiller's return inlet
- Flow rate (GPM) of the chilled water supply. A flow rate gauge should be found on the supply pipe. If a gauge is not available, the design flowrate from as-built drawings may be used

### **Chilled Water System Measurements**

Temperature of CHWS \_\_\_\_\_

Temperature of CHWR \_\_\_\_\_

Flow rate (GPM) of CHWS \_\_\_\_\_

Now, using the measurements, do the following calculations:

$CHWR - CHWS = \Delta T$ :

$\Delta T \times 500 \times (GPM \div 12,000) = \text{Load (in tons)}$ :

$\text{Load} \times 1.1 = \text{Maximum Cooling Load}$

How much of your existing chiller capacity does your building currently need? To answer this, do the following calculation:

$\text{Maximum Cooling Load} \div \text{Chiller Capacity} = \text{Percentage of Chiller Capacity Needed}$

If the required capacity of the chiller is 30 percent less than the installed capacity of your existing chiller, you should seriously consider replacing the chiller. The efficiency of the chiller decreases sharply below 70 percent loading. Also, remember that the chiller is operating most of the time at part-load conditions with your newly reduced loads, which increases your rightsizing potential even further.

## **Boiler Systems Survey**

*Collect the following information:*

---

Heating Plant Type	<u>Central hot water boiler</u>
Manufacturer	_____
Fuel (gas, oil, electric)	_____
Age	_____
Efficiency (percent)	_____
Size or Capacity	_____
(in Mbtu/hr)	

---

*Calculate the maximum heating load for your building using the following procedure:*

What is the maximum heating load for the building (in MBtu/hr)? This load will be compared with the heating system capacity recorded above. To determine maximum heating load, take the following measurements in the morning on a typical cold winter day to capture peak load effects on your system.

*Note: An energy management system may also log these measurements. The following procedure is tailored to typical central hot water boiler systems.*

- Temperature of the hot-water supply (HWS). A temperature gauge should be found on the pipe at the boiler's supply outlet
- Temperature of the hot water return (HWR). A temperature gauge should be found on the pipe at the boiler's return inlet
- Flow rate (GPM) of the hot water supply. A flow rate gauge should be found on the supply pipe. If a gauge is not available, the design flow rate from as-built drawings may be used

---

### Boiler System Measurements

Temperature of HWS \_\_\_\_\_  
 Temperature of HWR \_\_\_\_\_  
 Flow rate (GPM) of HWS \_\_\_\_\_

---

Now, using the measurements, do the following calculations:

$$\text{HWR} - \text{HWS} = \Delta T$$

$$\Delta T \times 500 \times \text{GPM} / 1,000 = \text{Load (in MBtu/hr)}$$

$$\text{Load} \times 1.1 = \text{Maximum Heating Load}$$

How much of your existing boiler capacity does your building currently need?

$$\text{Maximum Heating Load} \div \text{Heating Plant Capacity} = \text{Percentage of Heating Capacity Needed}$$

For other types of heating systems, there are other ways of measuring maximum heating load.

- For systems such as forced-air furnaces and heat pumps that respond to thermostats by cycling on and off, a simple runtime meter will show how much of the time the unit cycles on. Supply-temperature data logged every few minutes by an EMCS or other data logger can also be analyzed to determine how much of the time the unit is cycled on. The percentage of heating capacity needed is the time the unit operates divided by the total time during a high heating load period
- Measuring steam boiler loading is similar, but more complicated than for a hot water boiler. Instead of the water flow rate, the steam flow rate must be measured. Instead of multiplying a temperature difference by a factor accounting for the heat content of each GPM, the temperature and pressure properties of the supply steam must be recorded from gauges on the supply line and used to determine the heat content of each pound of steam using a steam table

Other strategies for measuring heating loads include:

- Periodic gas meter readings
- Oil tank gauge readings or oil deliveries
- On/off cycle times for systems that operate intermittently

## ***Unitary Systems Survey***

Collect the following information for each type of unit installed in your building:

---

### **Boiler System Measurements**

Unitary System Type (*choose one*)

- ☐ Packaged rooftop unit
- ☐ Split system
- ☐ Vertical packaged unit
- ☐ Heat pump

Manufacturer \_\_\_\_\_

Htg Fuel (gas, oil, electric) \_\_\_\_\_

Unit Age \_\_\_\_\_

Cooling Efficiency (%) \_\_\_\_\_

Heating Efficiency (%) \_\_\_\_\_

Size or Capacity (cooling) \_\_\_\_\_

(in tons)

Size or Capacity (heating) \_\_\_\_\_

(in tons)

---

*Calculate the maximum cooling and heating loads for your building using the following steps:*

What are the maximum heating and cooling loads for the building (in MBtu/hr)? These loads will be compared with the cooling and heating capacities recorded above. To determine maximum heating or cooling load use the procedure described in the heating section for small systems that cycle on and off.

Time cycled on ÷ Total time = Percentage of Capacity Needed

A data logger can be used to determine how much of the time the unit is cycled on.

**Figure 1: Heat Flow in Buildings**


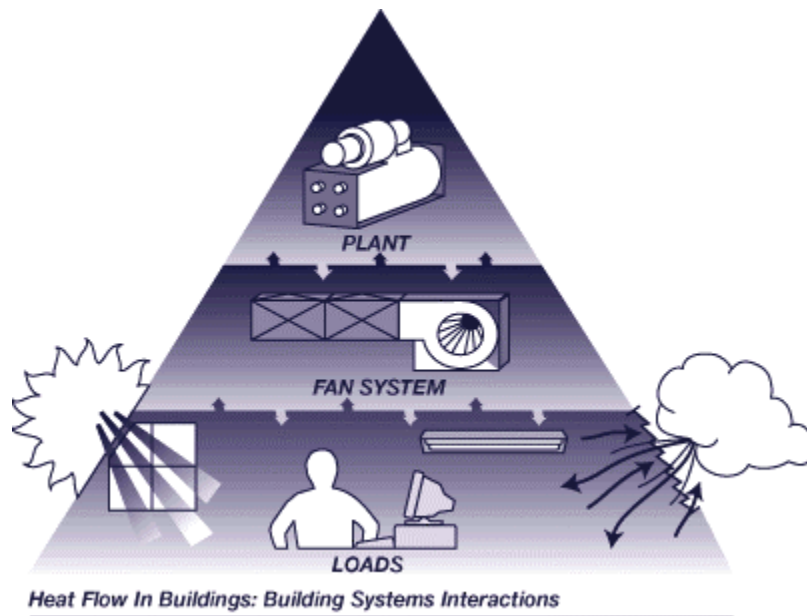


Figure 1 shows the interaction of heating, cooling, and electrical loads with the HVAC equipment. Arrows indicate heat flow pathways. Reducing heating, cooling, and electrical loads reduces the demand on HVAC equipment, thus saving energy.


[Return to text](#)

**Figure 2: Typical Water-Cooled Chiller System**

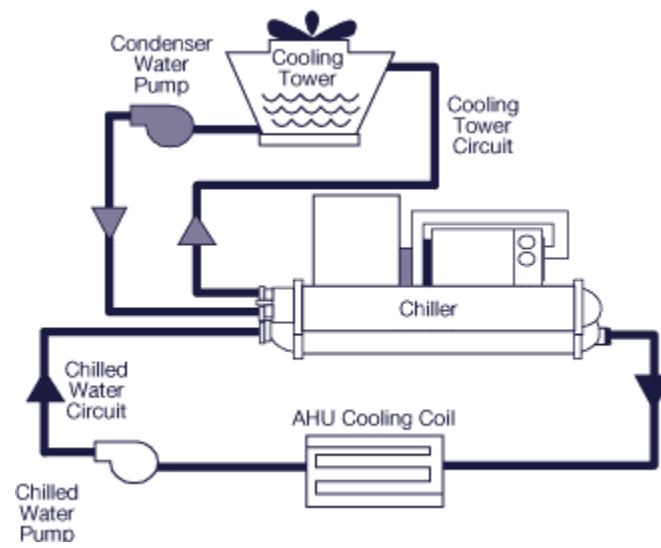


[Return to text](#)

**Figure 3: Cooling Tower Types**

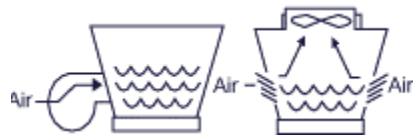


[Return to text](#)

**Figure 4: Indirect Water Side Economizer**

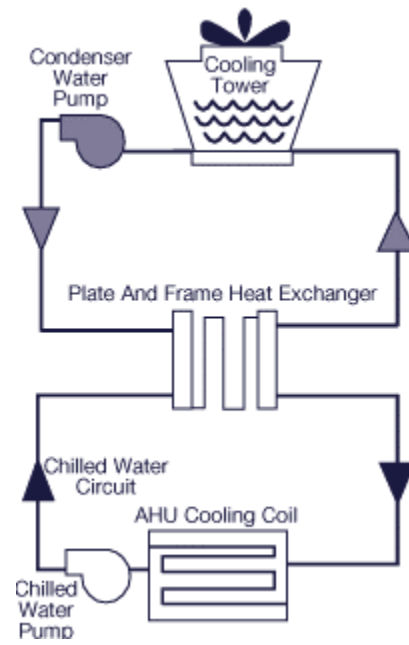


[Return to text](#)

**Figure 5: Primary/Secondary Pumping Loop**

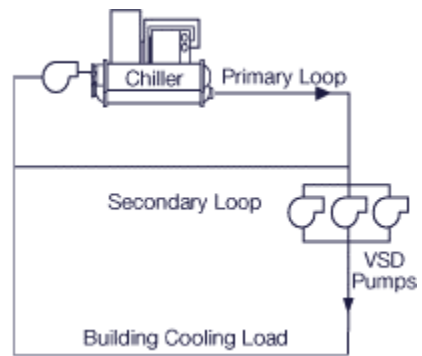


[Return to text](#)

**Figure 6: Boiler Components**

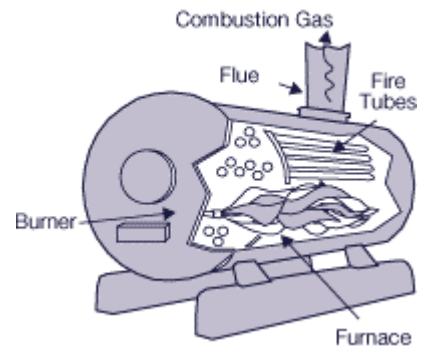

[\*Return to text\*](#)


**Figure 7: Boiler Economizer Fuel Energy Savings**

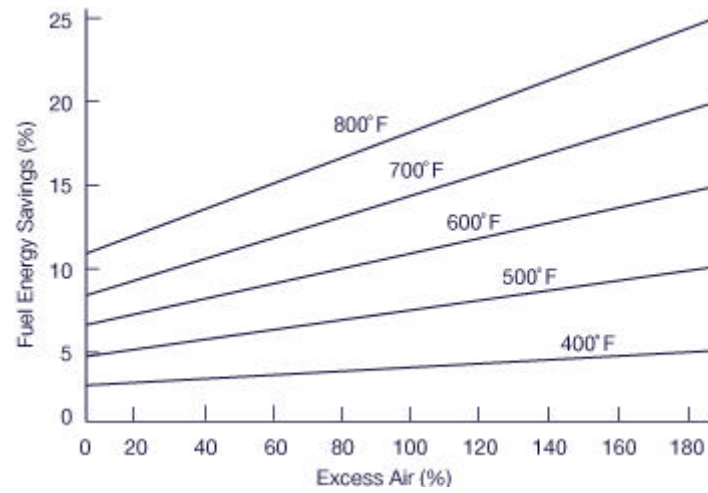

Source: Turner, *Energy Management Handbook* 2<sup>nd</sup> ed.


[Return to text](#)

**Figure 8: Self-Contained Packaged AC Unit**

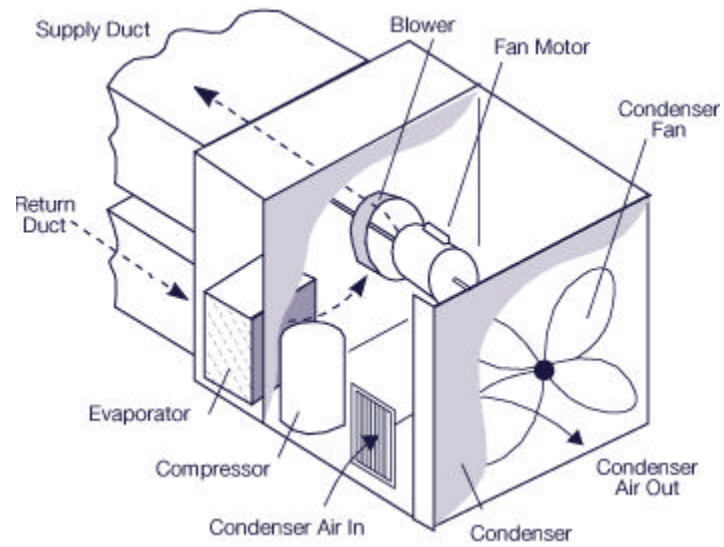


[Return to text](#)

**Figure 9: Vertical Packaged Units**

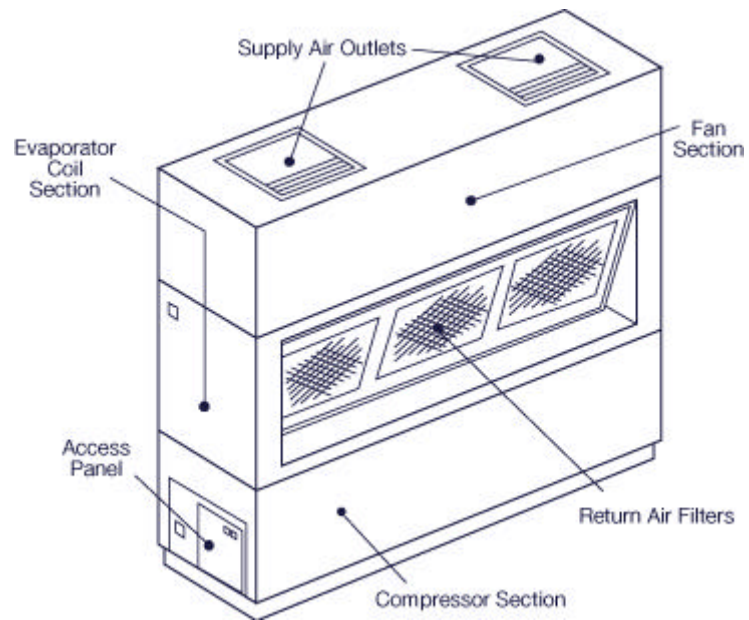


[Return to text](#)

**Figure 10: Split-System Packaged Units**

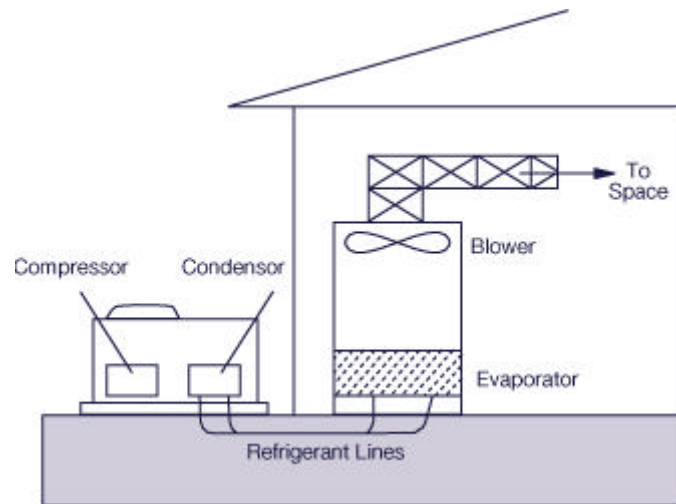


[Return to text](#)

**Figure 11: Water-Loop Heat Pump System**

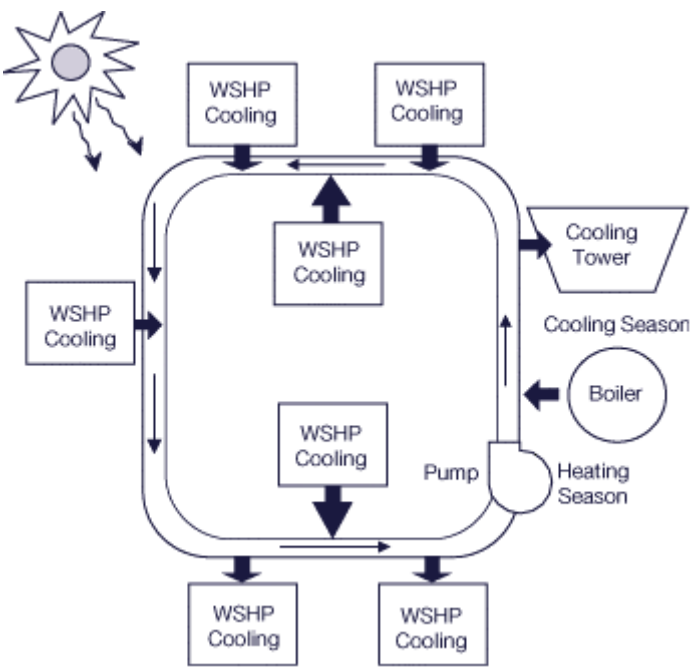

[Return to text](#)

**Figure 12: Partial-Storage Strategy**

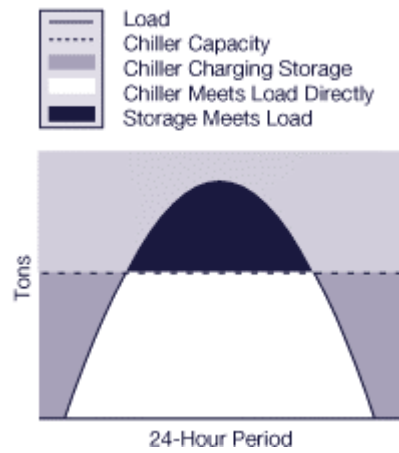

Source: E Source, *Commercial Space Cooling Technology Atlas*.

[Return to text](#)